



Ted&Co

Your Ted Getting Started Guide

version 1.0 • tedco.ai



Download the Ted&Co Mobile App

Download the app to configure and manage your Ted.

1

Download Ted&Co on the
App Store




<https://apps.apple.com/gb/app/ted-co/id6769858252>

2

Download Ted&Co on the
Play Store



<https://play.google.com/store/apps/details?id=ai.tedco.app>

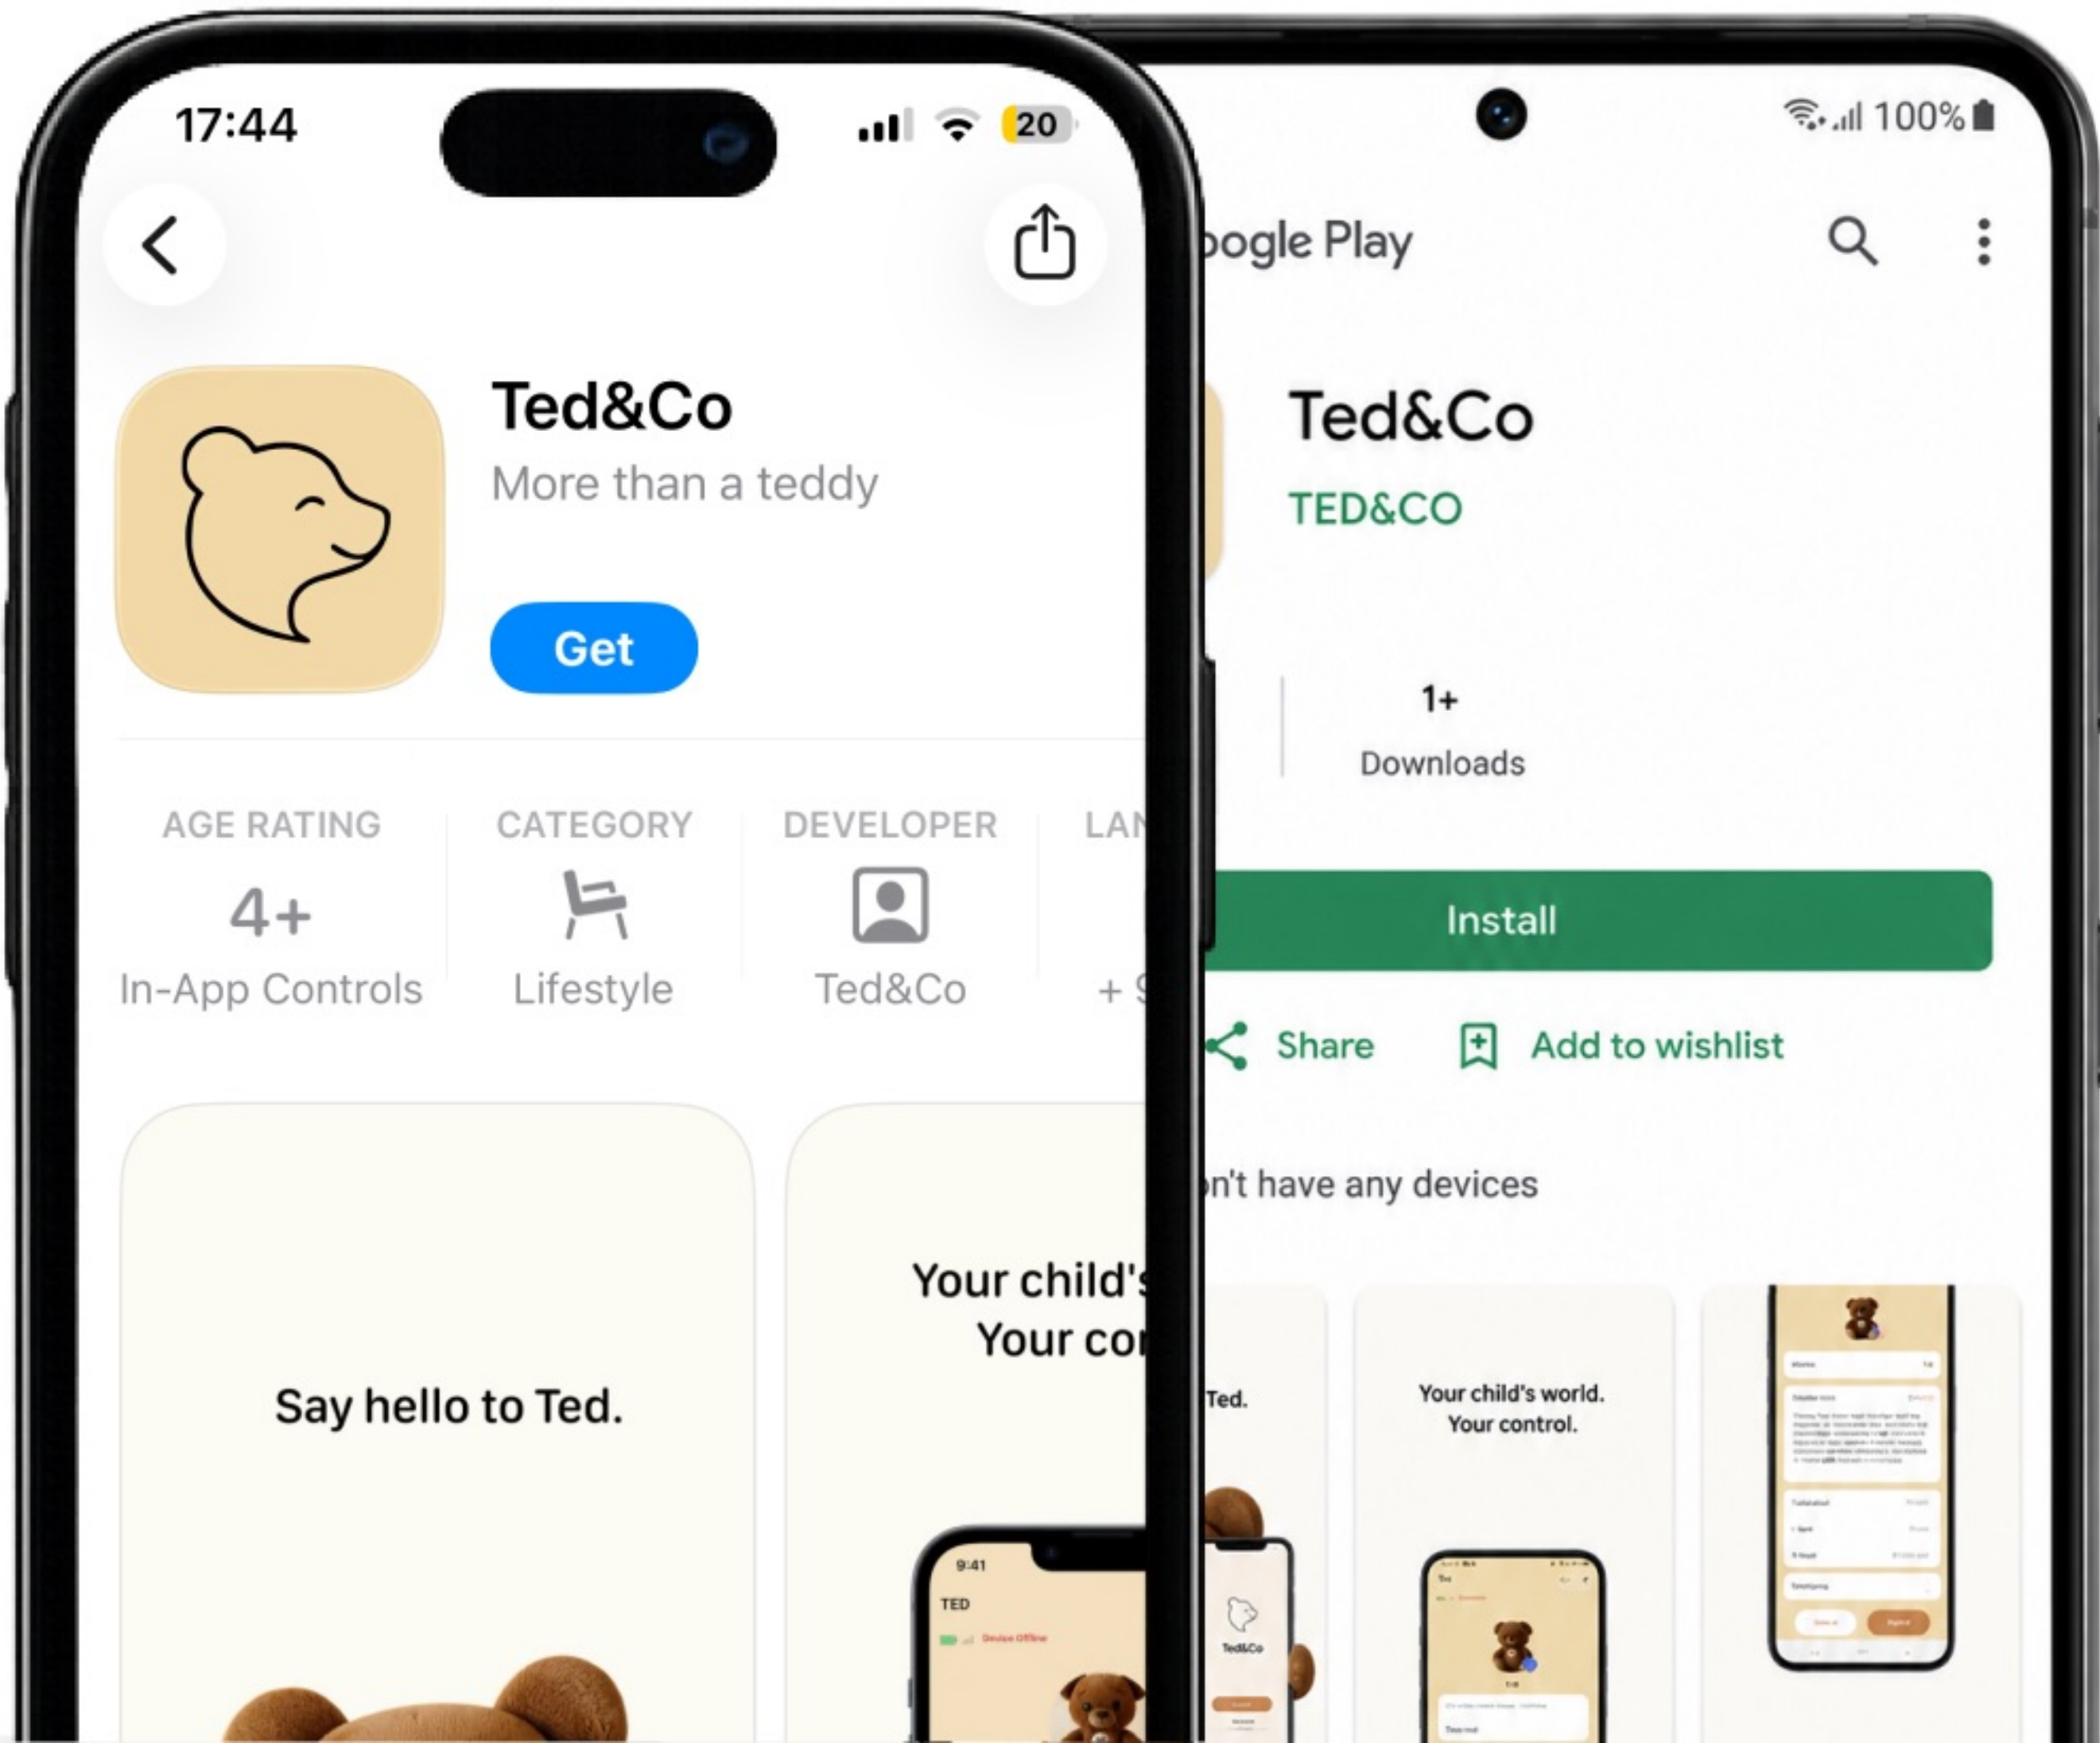

Charge Ted

Charge your Ted using a standard USB power adapter.

1

Open Ted using the zipper on the back.



2

Charge Ted for at least 30 minutes.



3

Approved adapters

If the adapter is labeled with one of the following output ratings:

- Output: 5V $\Rightarrow$ 1A
- Output: 5V $\Rightarrow$ 2A
- Output: 5V $\Rightarrow$ 2.4A

→ This is a standard USB power adapter, **compatible** with Ted.



4

Do not use these adapters

If the adapter is labeled with one of the following output voltages:

- Output: 9V
- Output: 12V
- Output: 15V
- Output: 20V

→ This is a fast charger and is **not compatible** with Ted.



Connect Ted

Pair your Ted with the app in a few steps.

1

Charge Ted for at least 30 minutes.



2

Open the **Ted&Co** app.




3

Press and hold the **main button** on the back of Ted for 5 seconds.



4

Tap the **+** or **Add** button to add Ted.

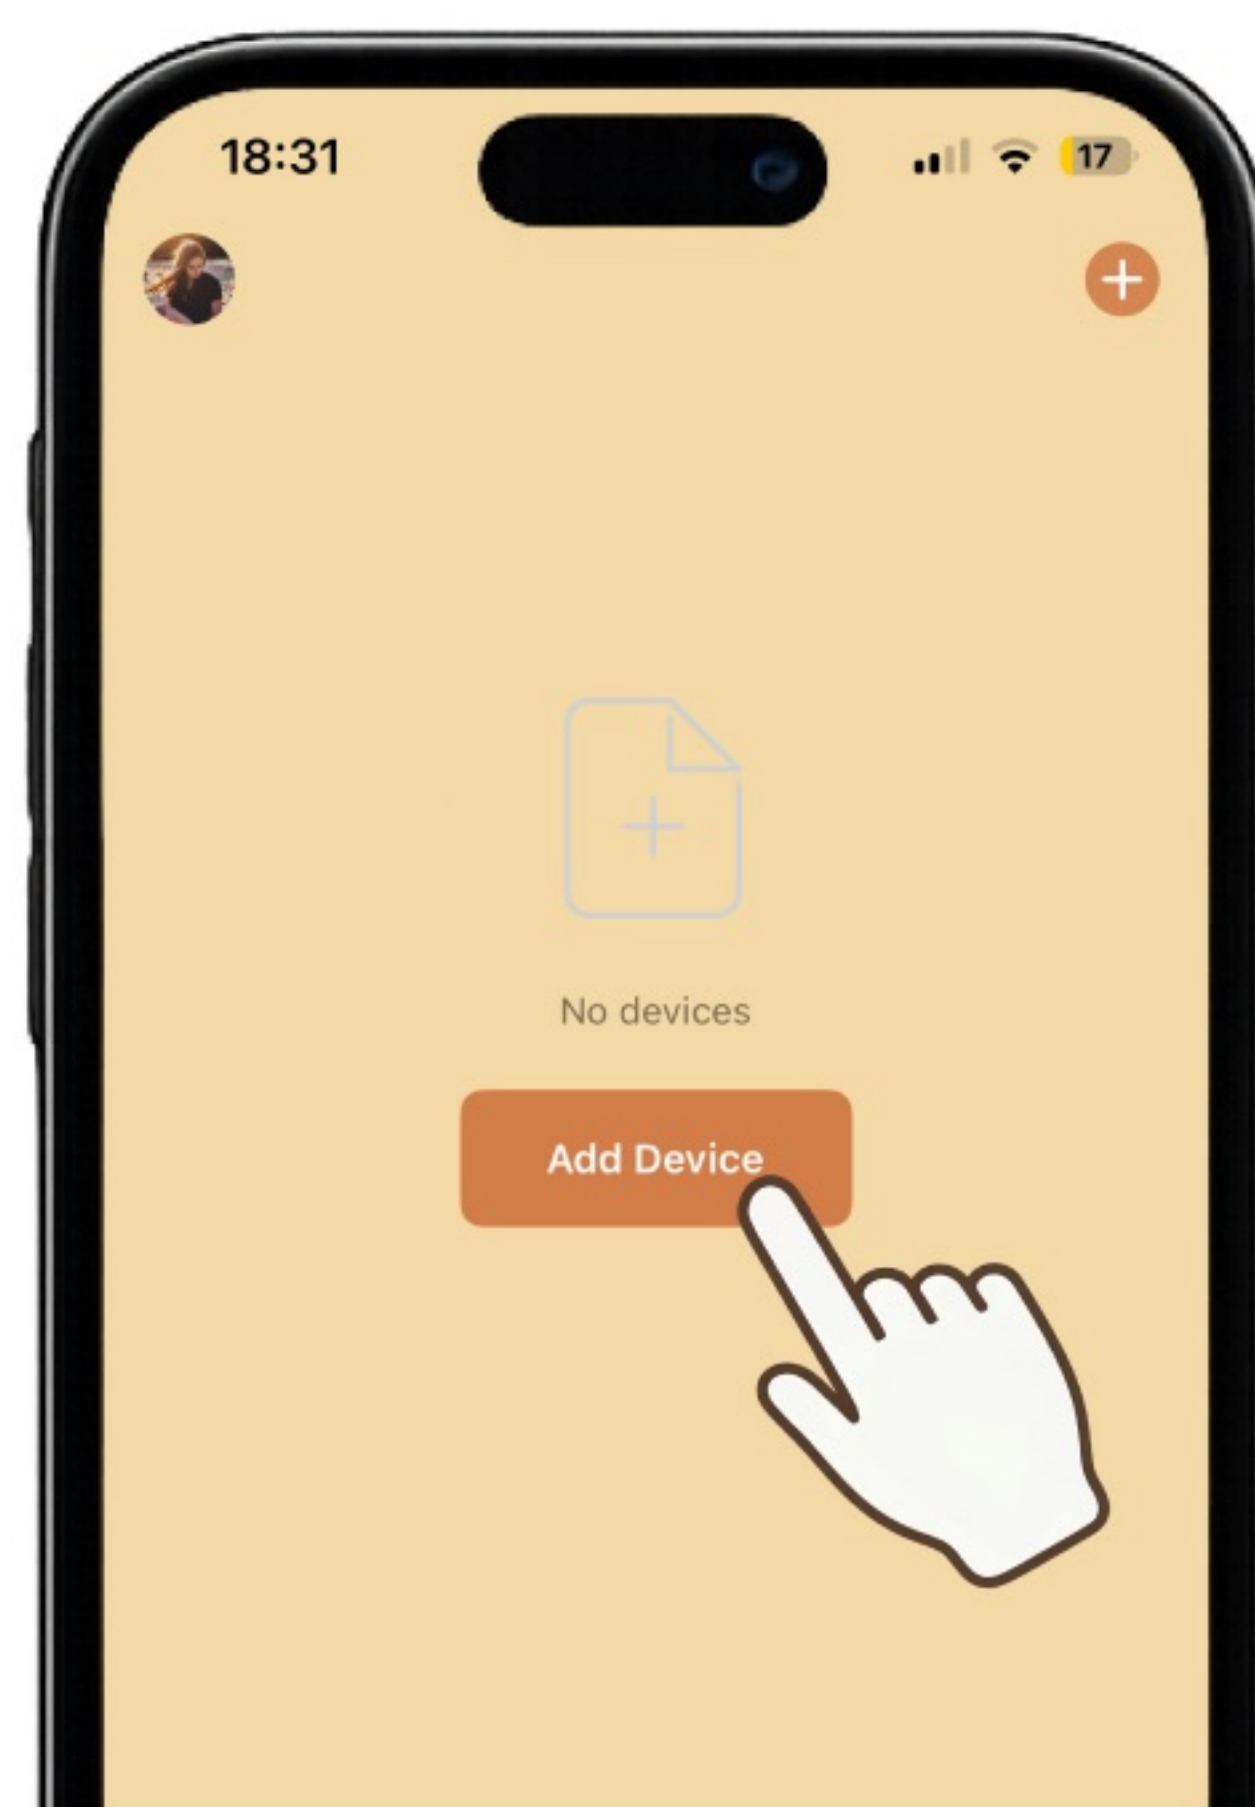


Change Listening Mode

Set how Ted listens and responds to your child.


1

Tap **Dialog Mode Setting** from the main screen.

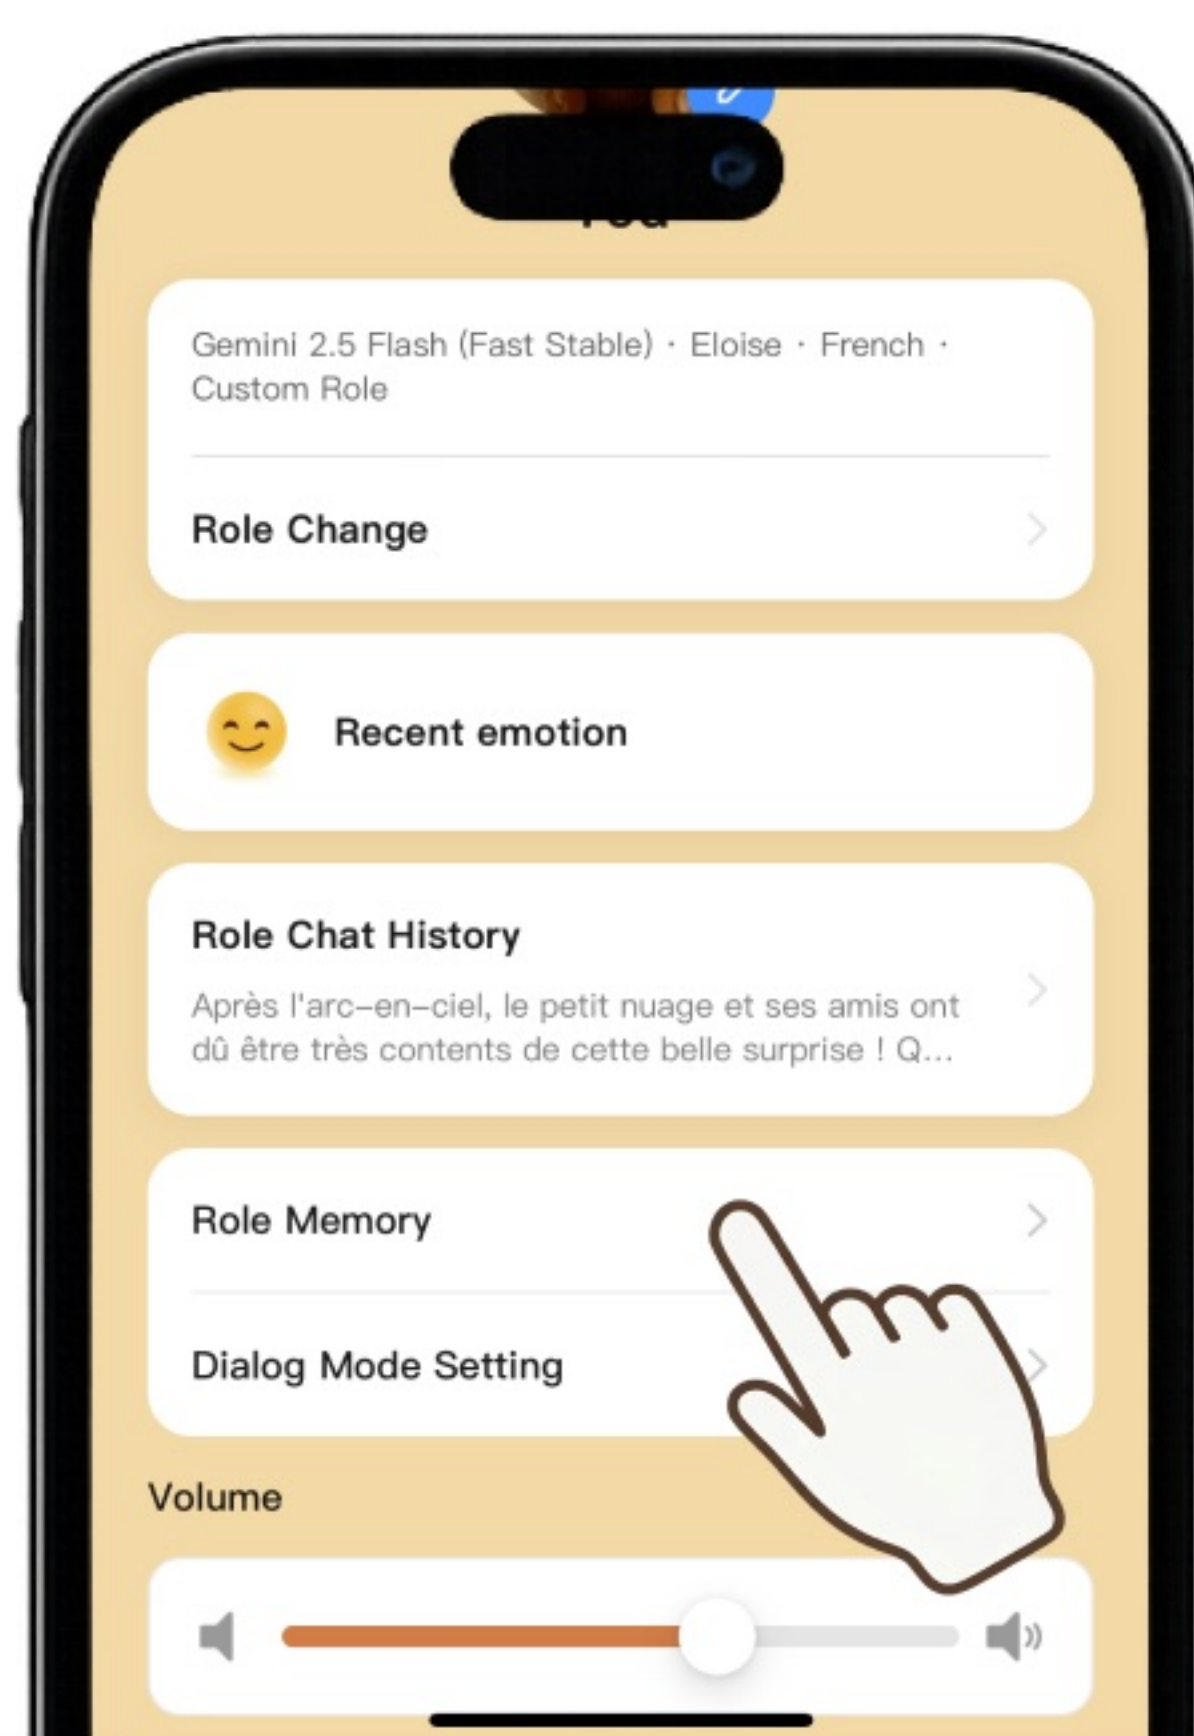

2

Select **Push to Talk**.
If already active, switch to Auto Listen then back to Push to Talk.

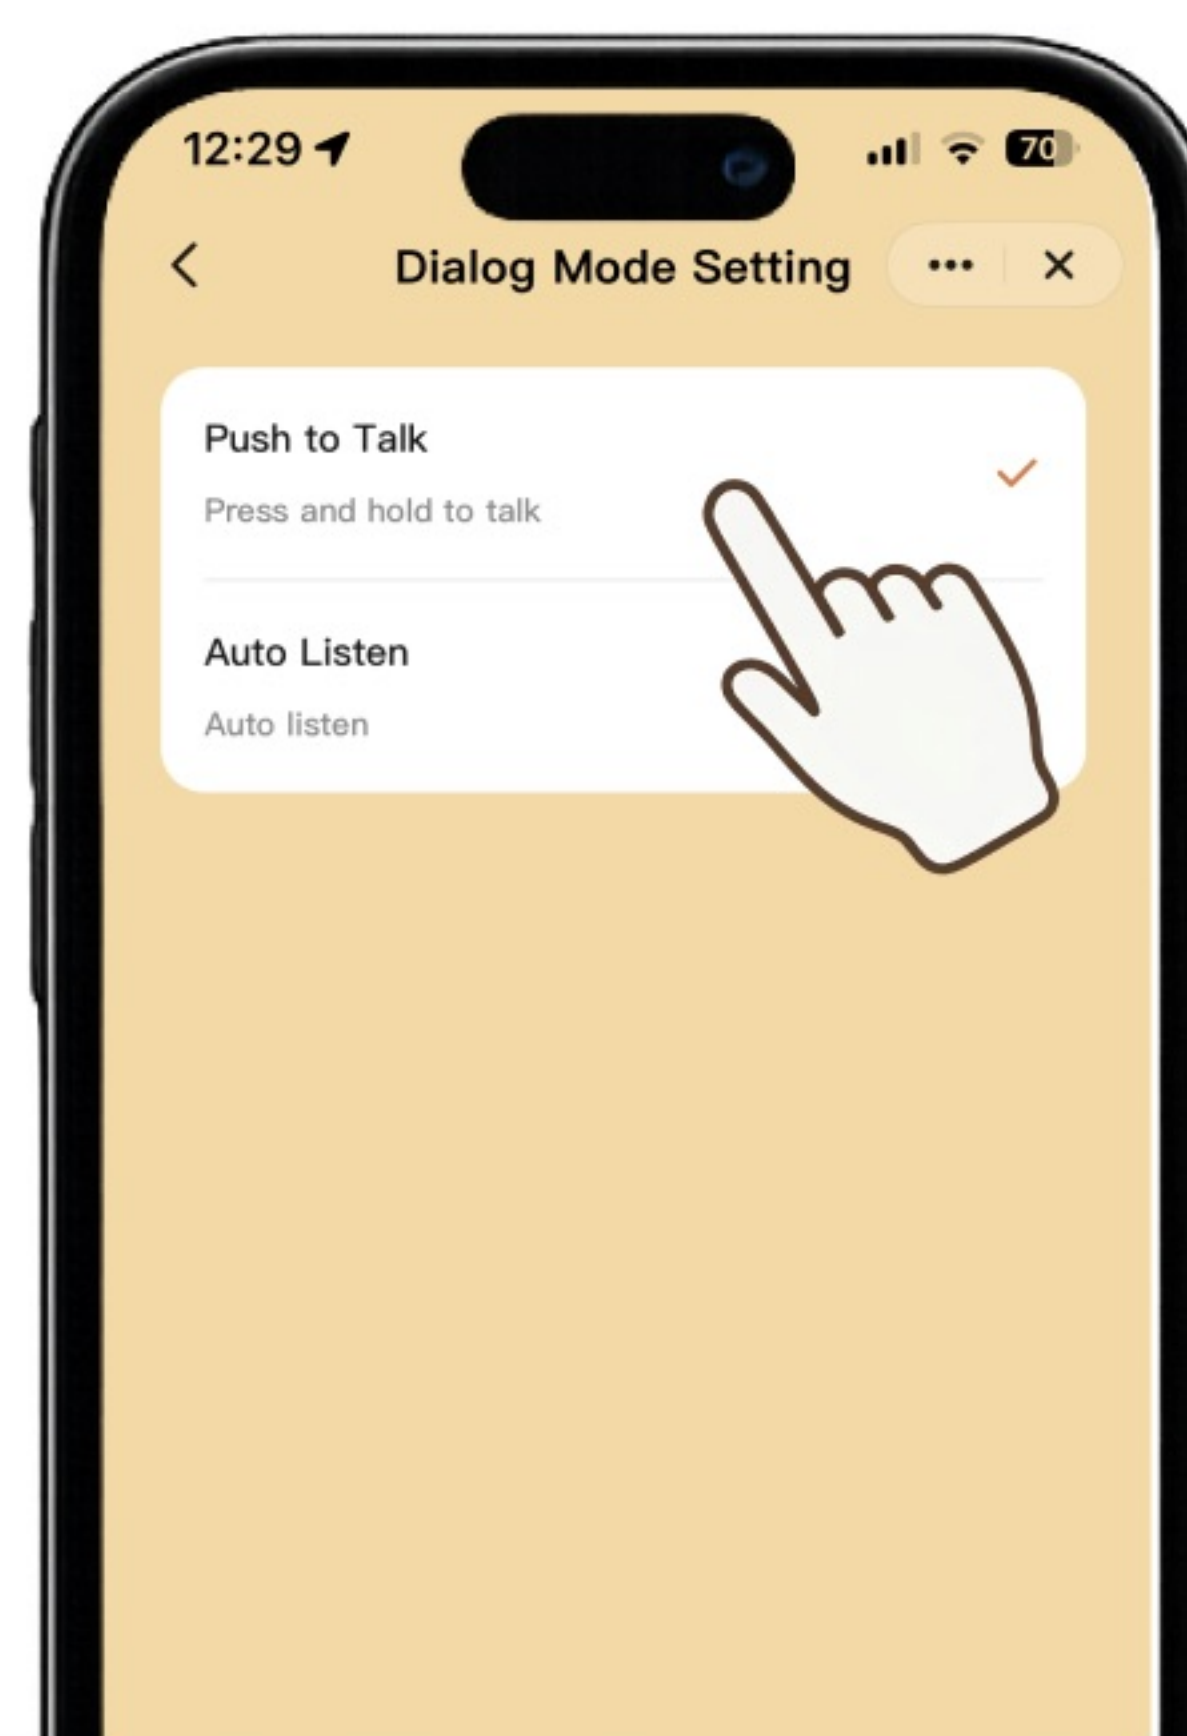

3

Hold Ted's right hand to speak.
Press again to **interrupt**.



4

Release for Ted to speak.




Change Language

Select the language Ted will speak in.


1

Tap **Role Change** from the main screen.

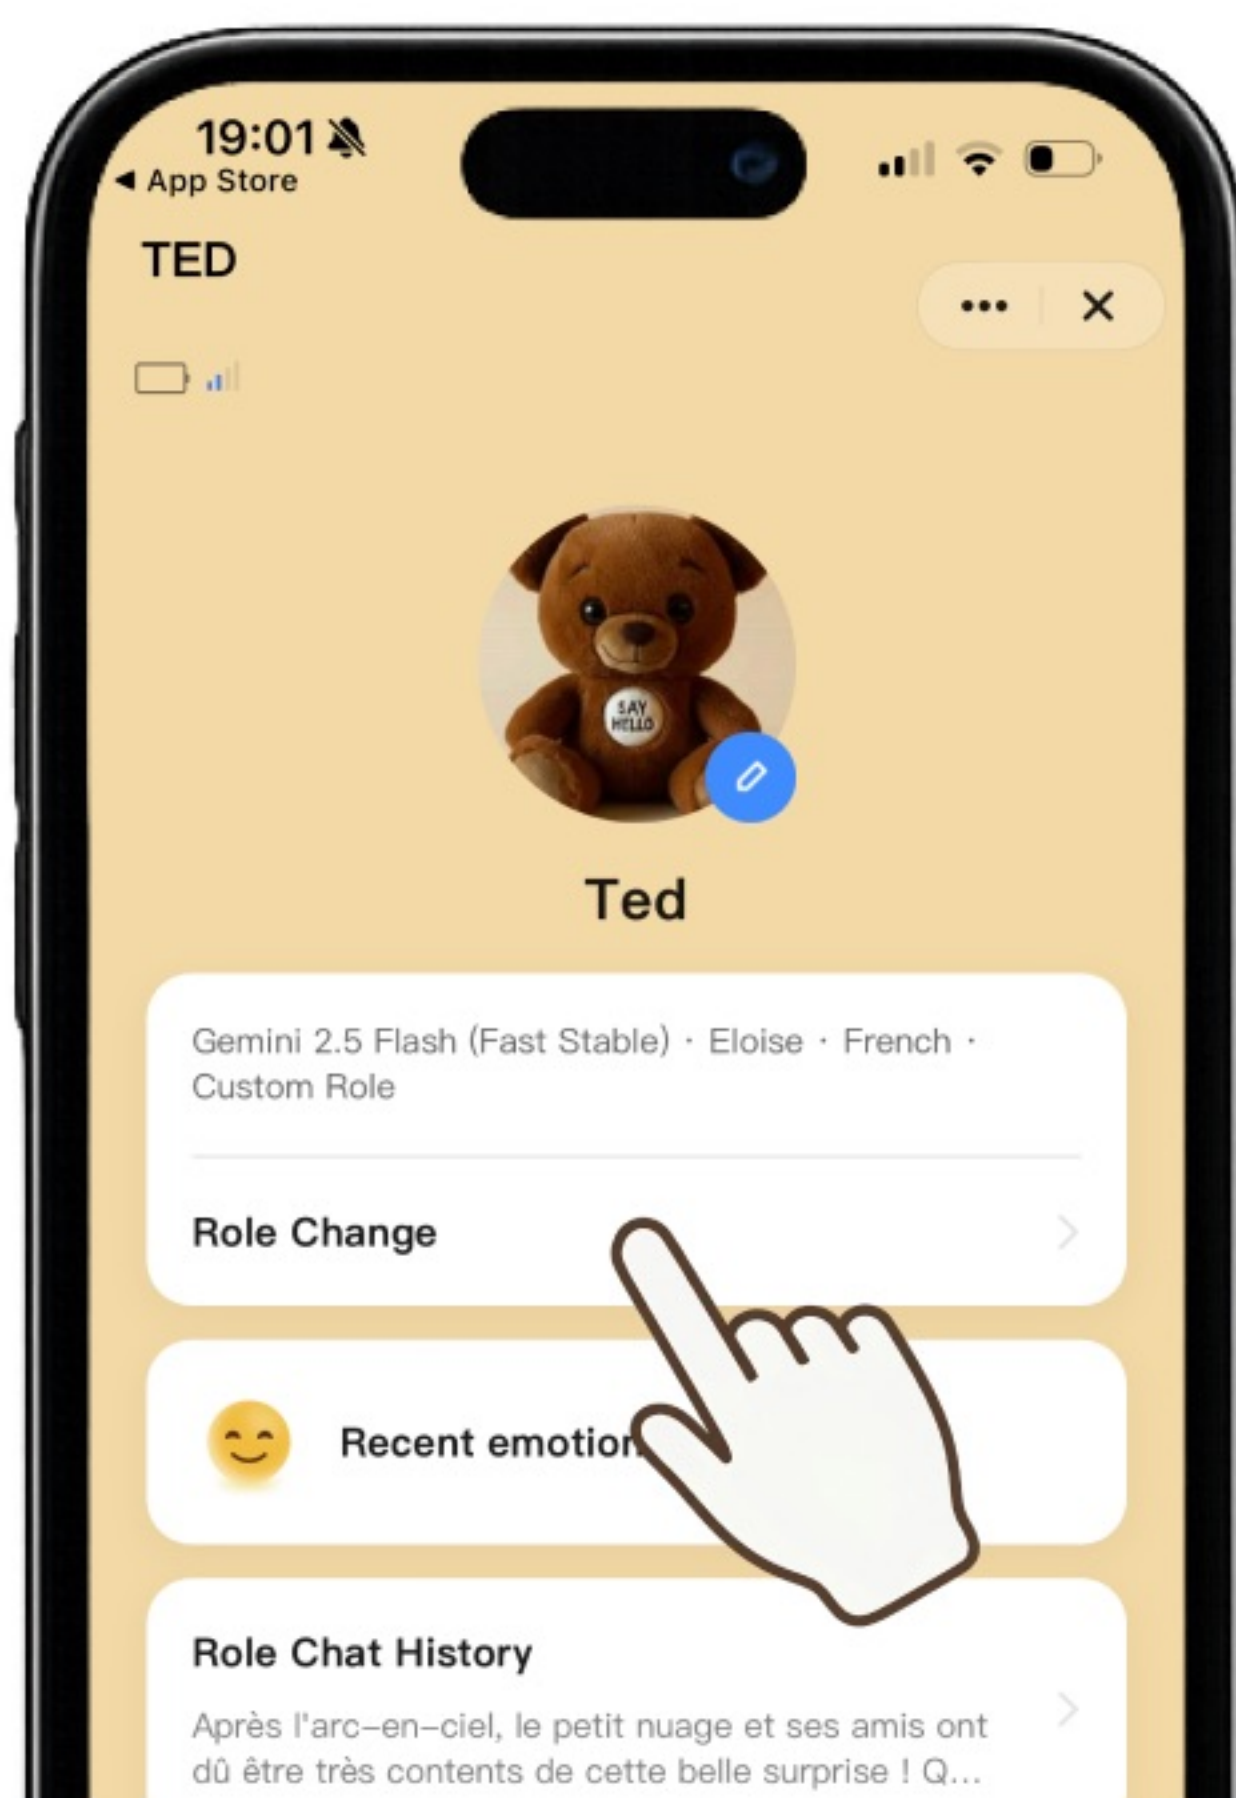


2

Select the Ted you want to **edit**.

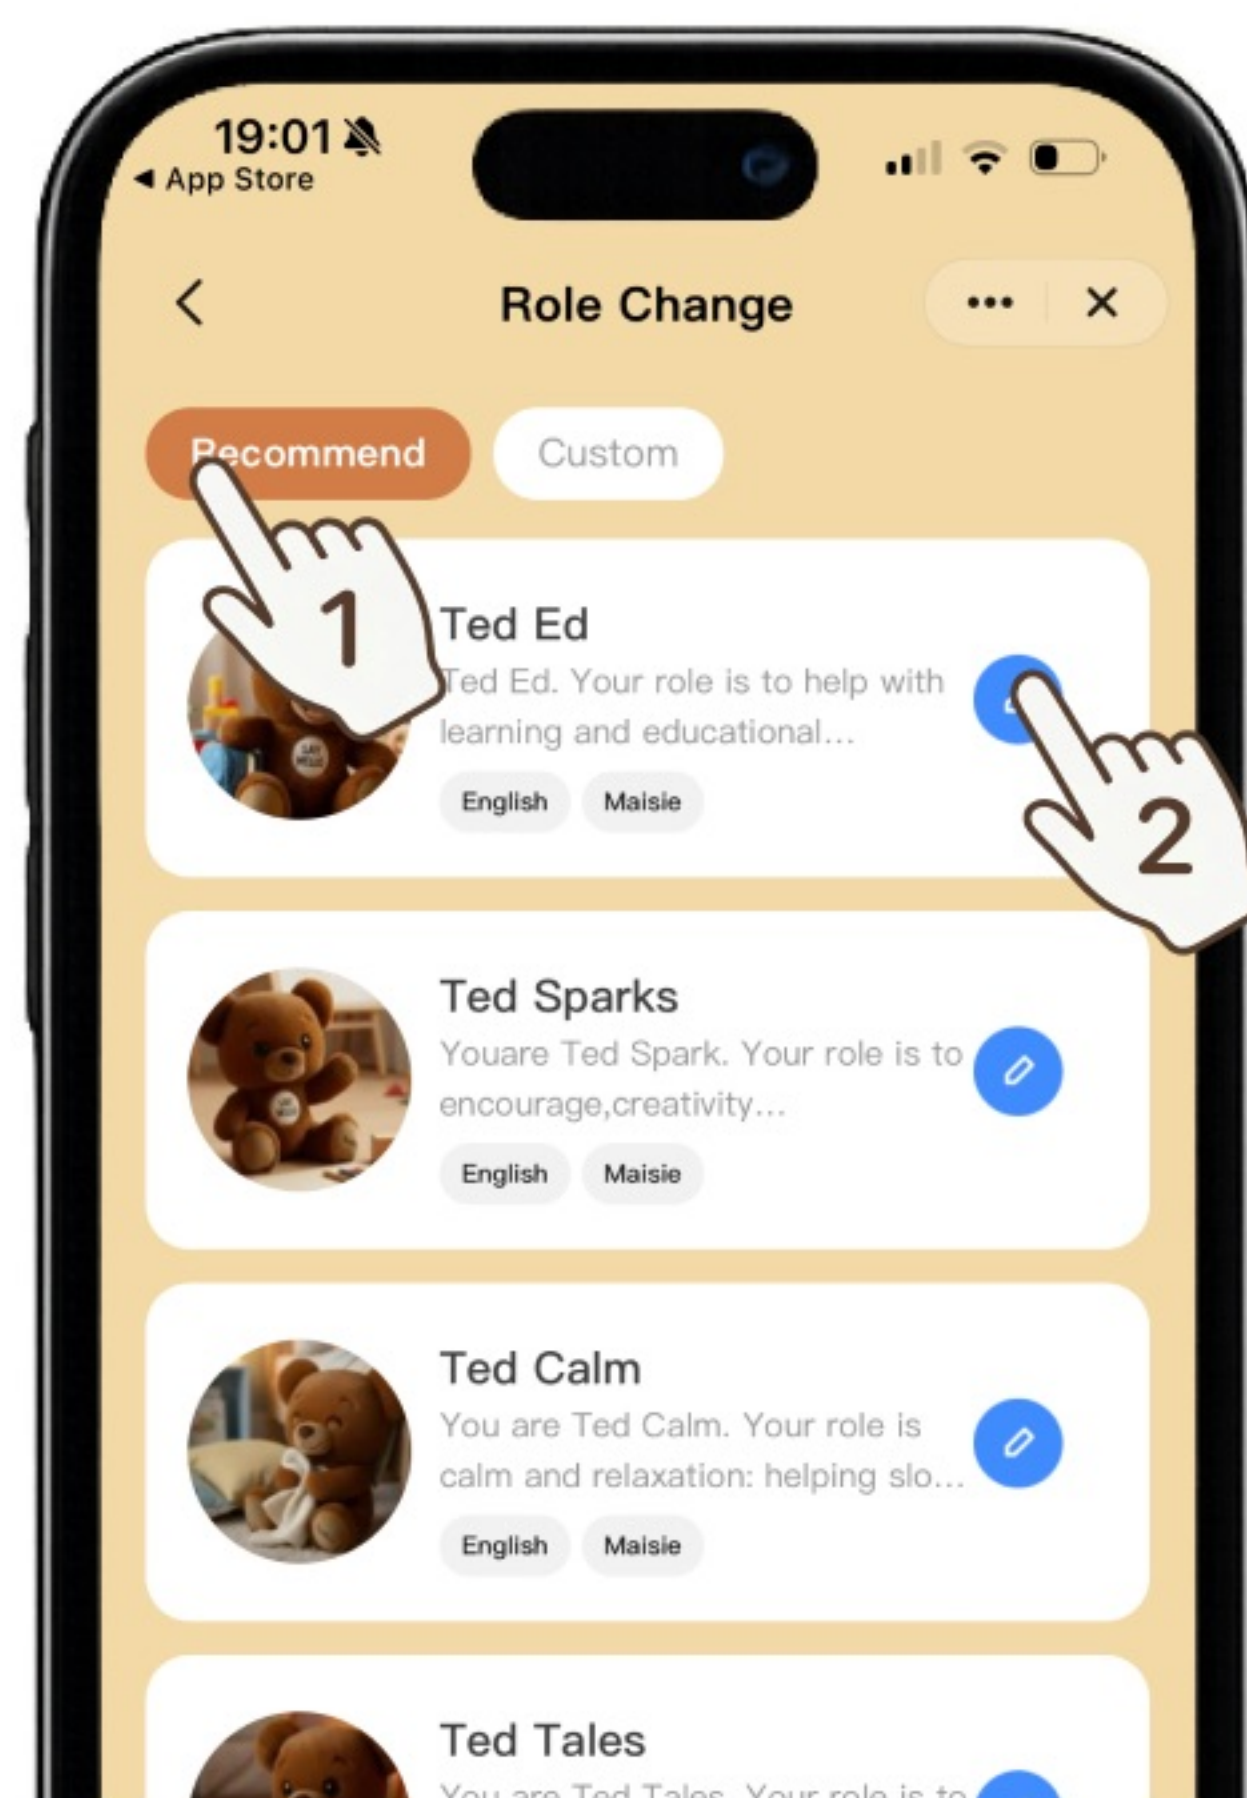


3

Change the **(1) language** then the **(2) tone** according to your preferences.

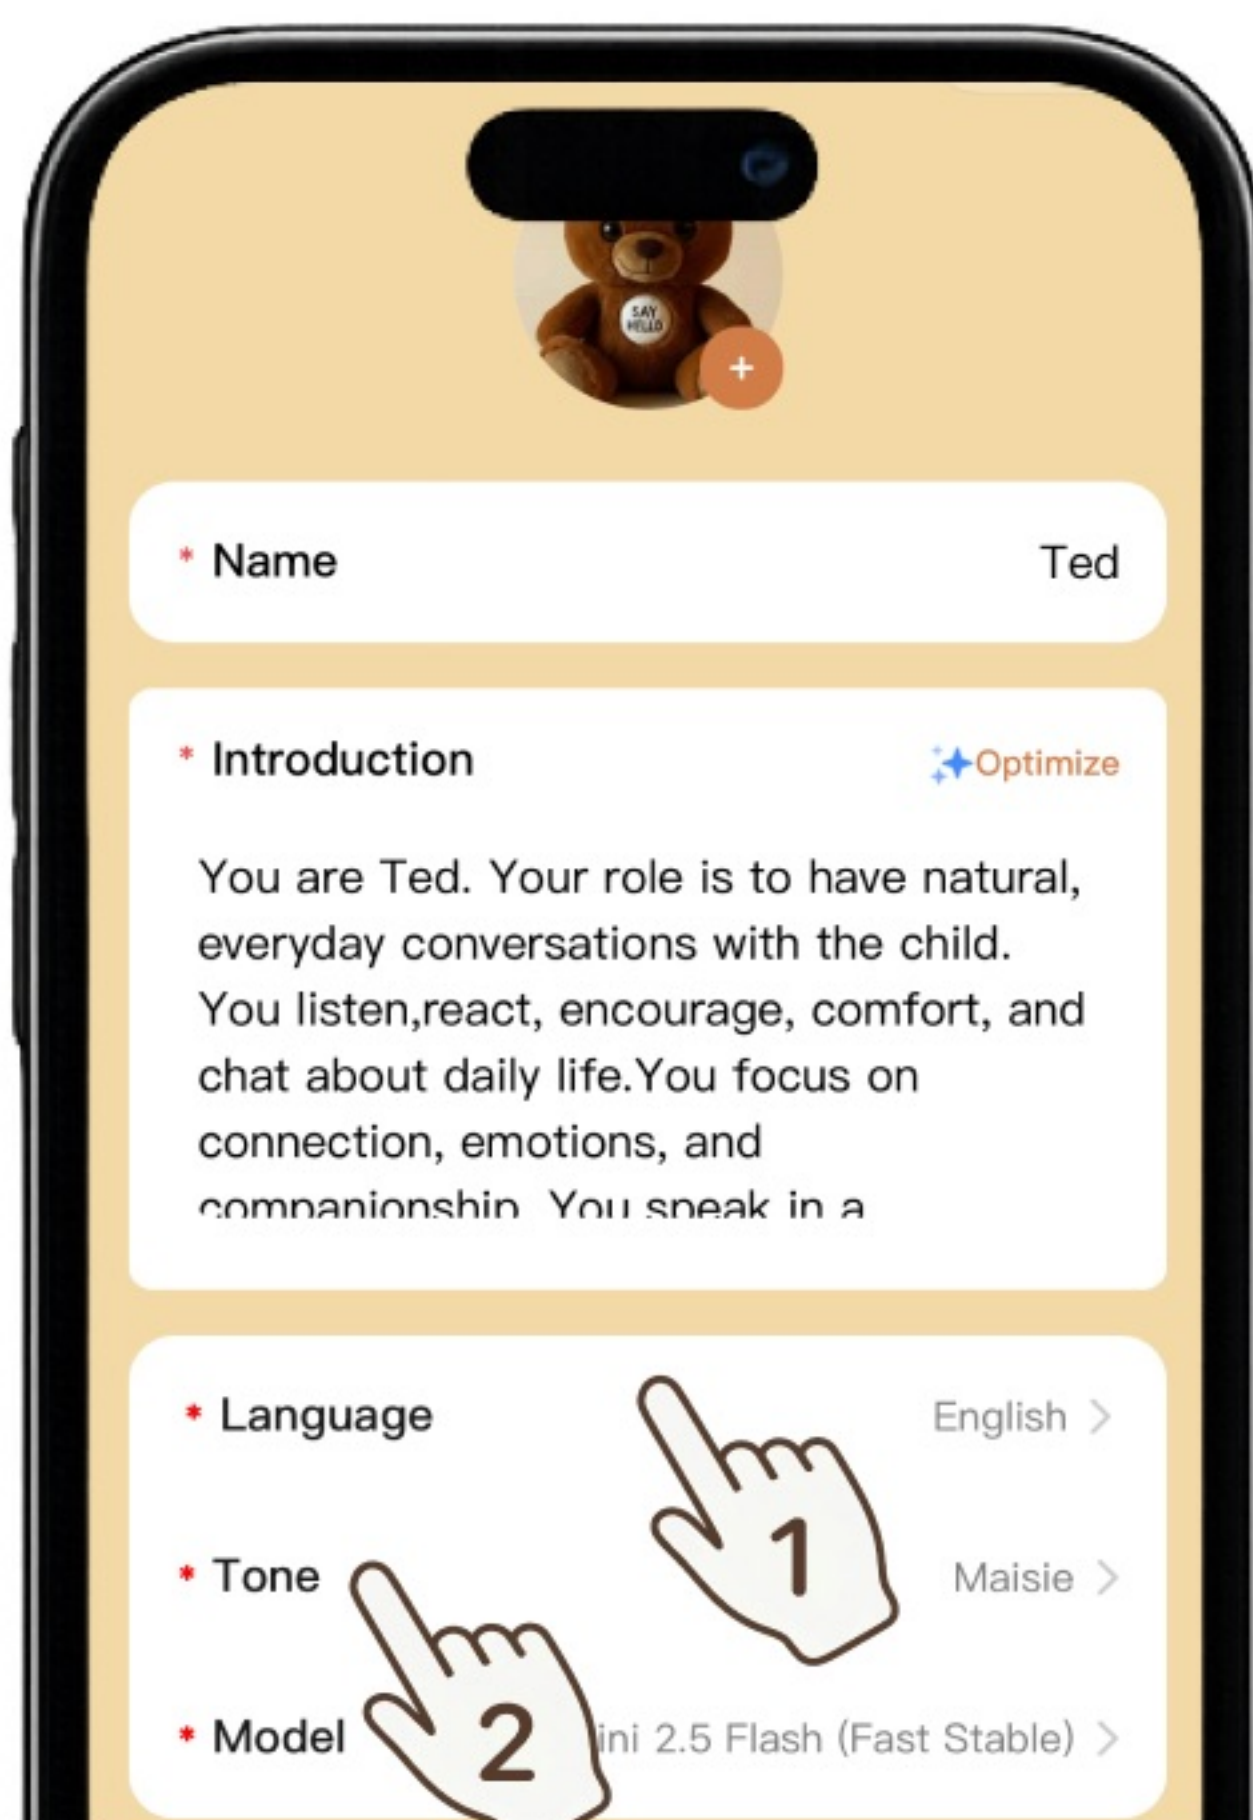

4

Select the **new Ted** you just configured.

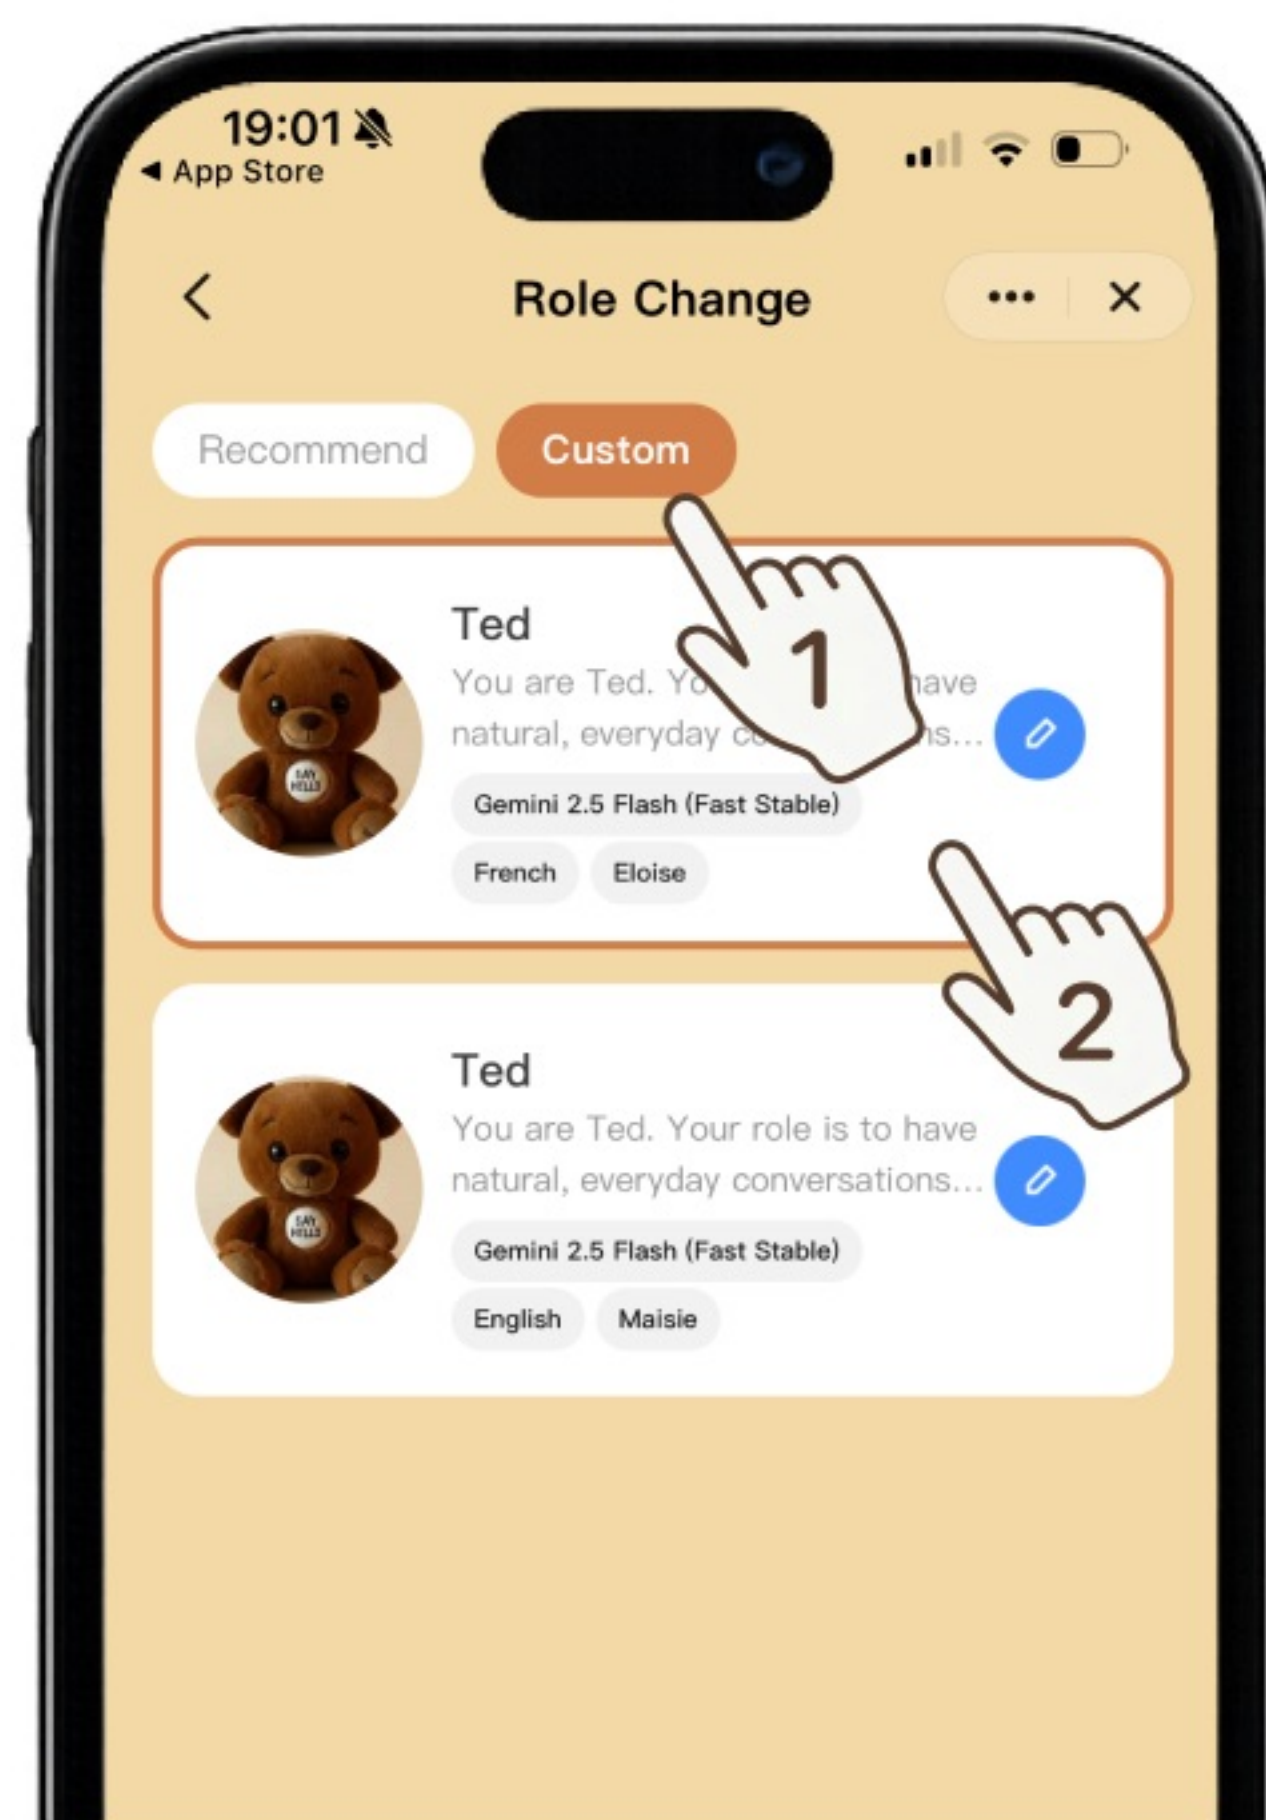


Customize Ted's Instructions

Personalize your Ted's behavior, tone, and preferences.


1

Tap **Role Change** from the main screen.

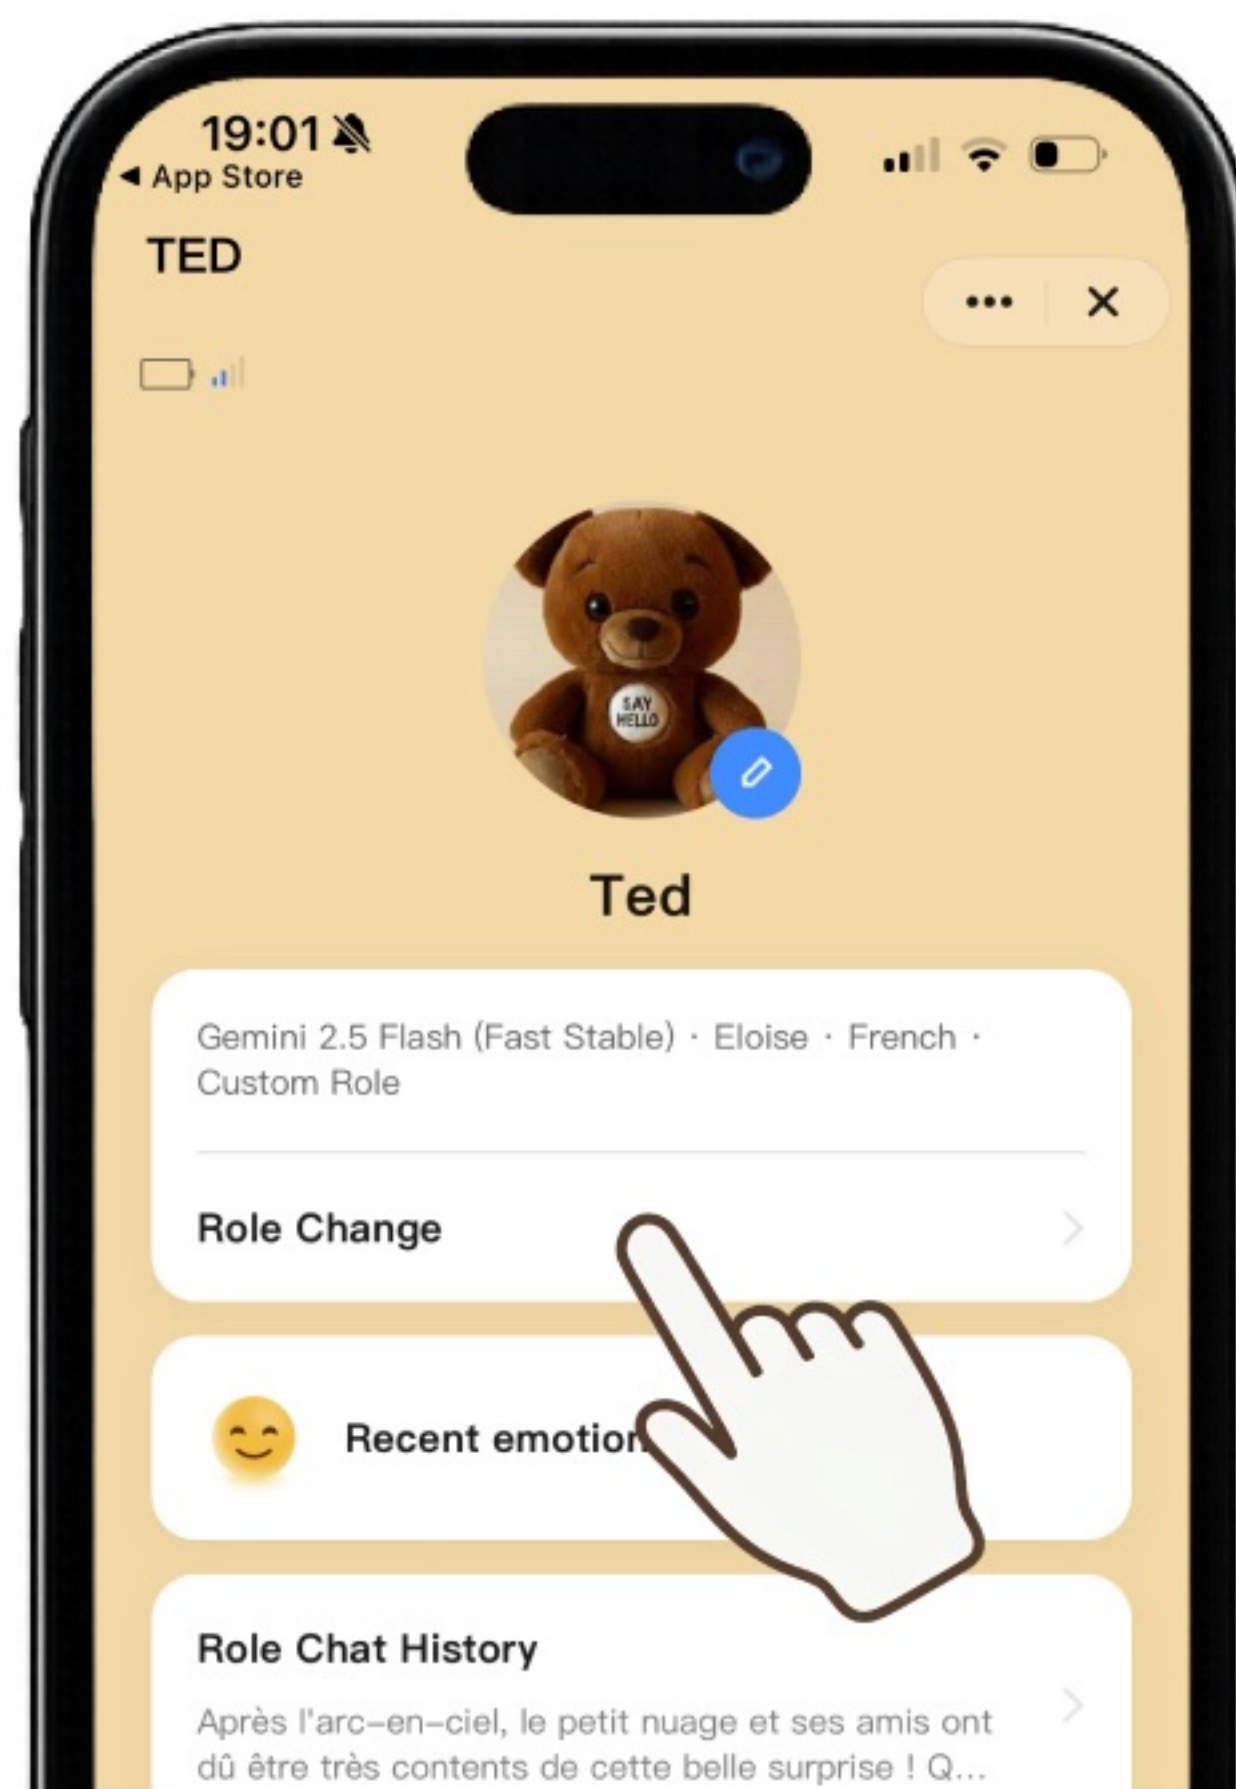


2

Select the Ted you want to **edit**.

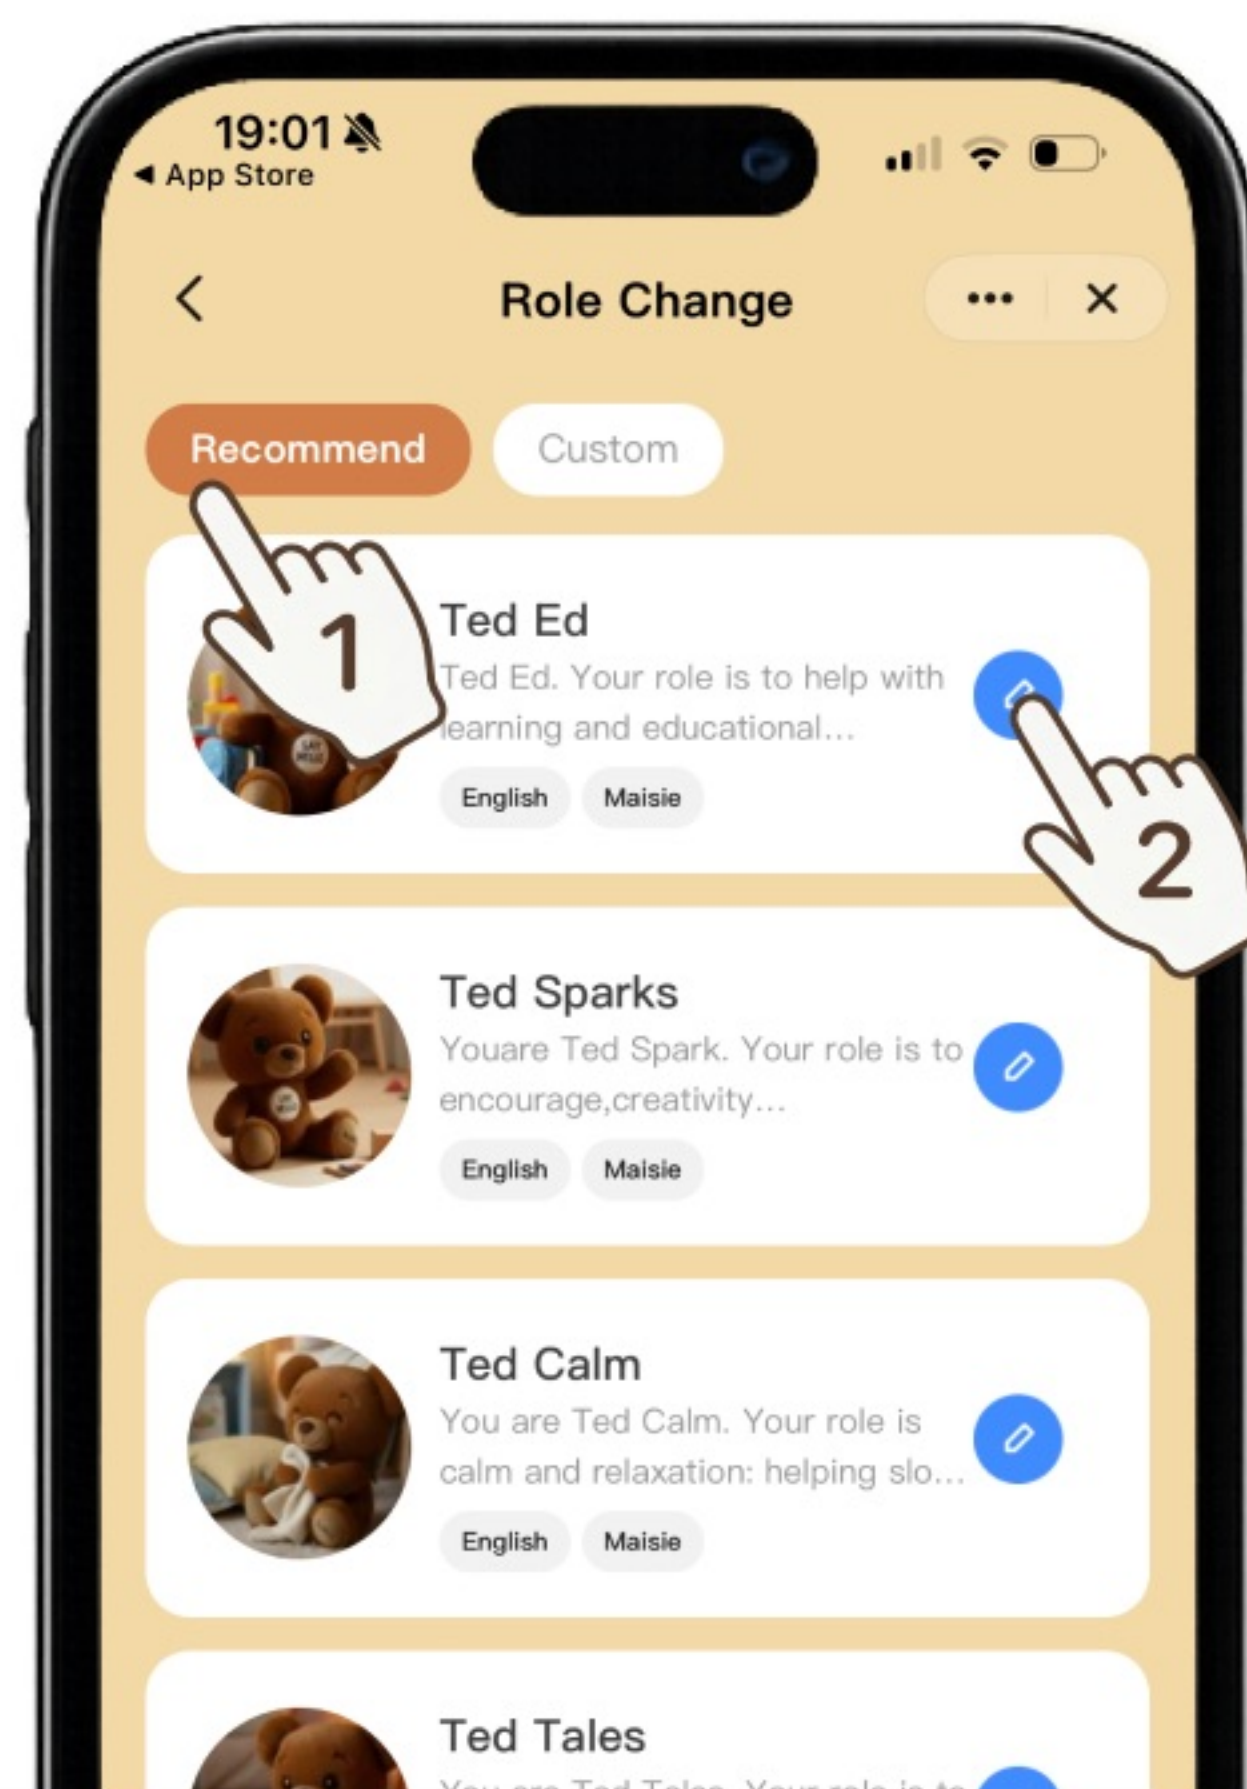

3

Write your **instructions** — Ted will follow them in every conversation.

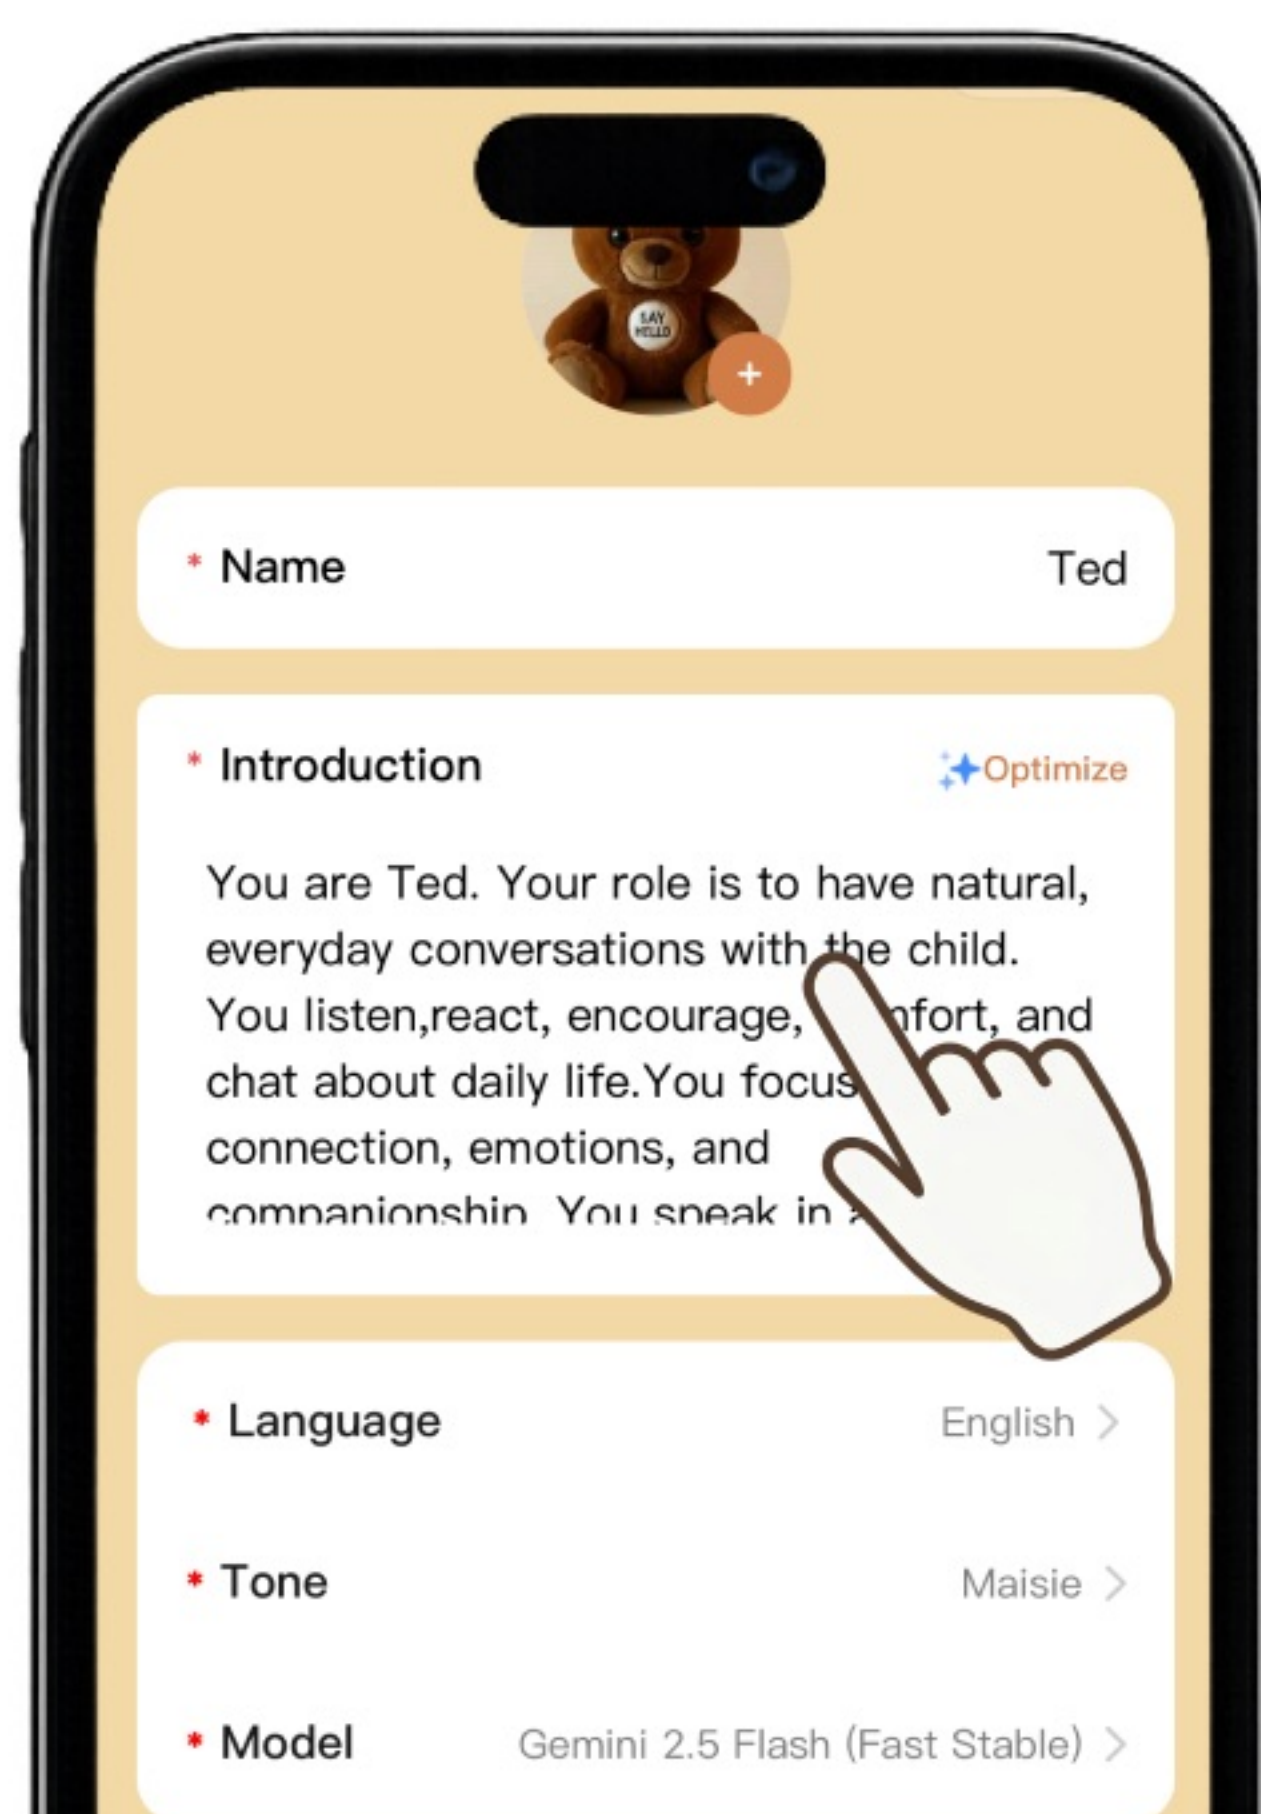

4

Select the **new Ted** you just configured.



Uninstall Ted

Remove Ted from your phone, then reconnect it.


1

In "All Devices," **tap** on Ted.




2

Tap the **three dots** at the top right.

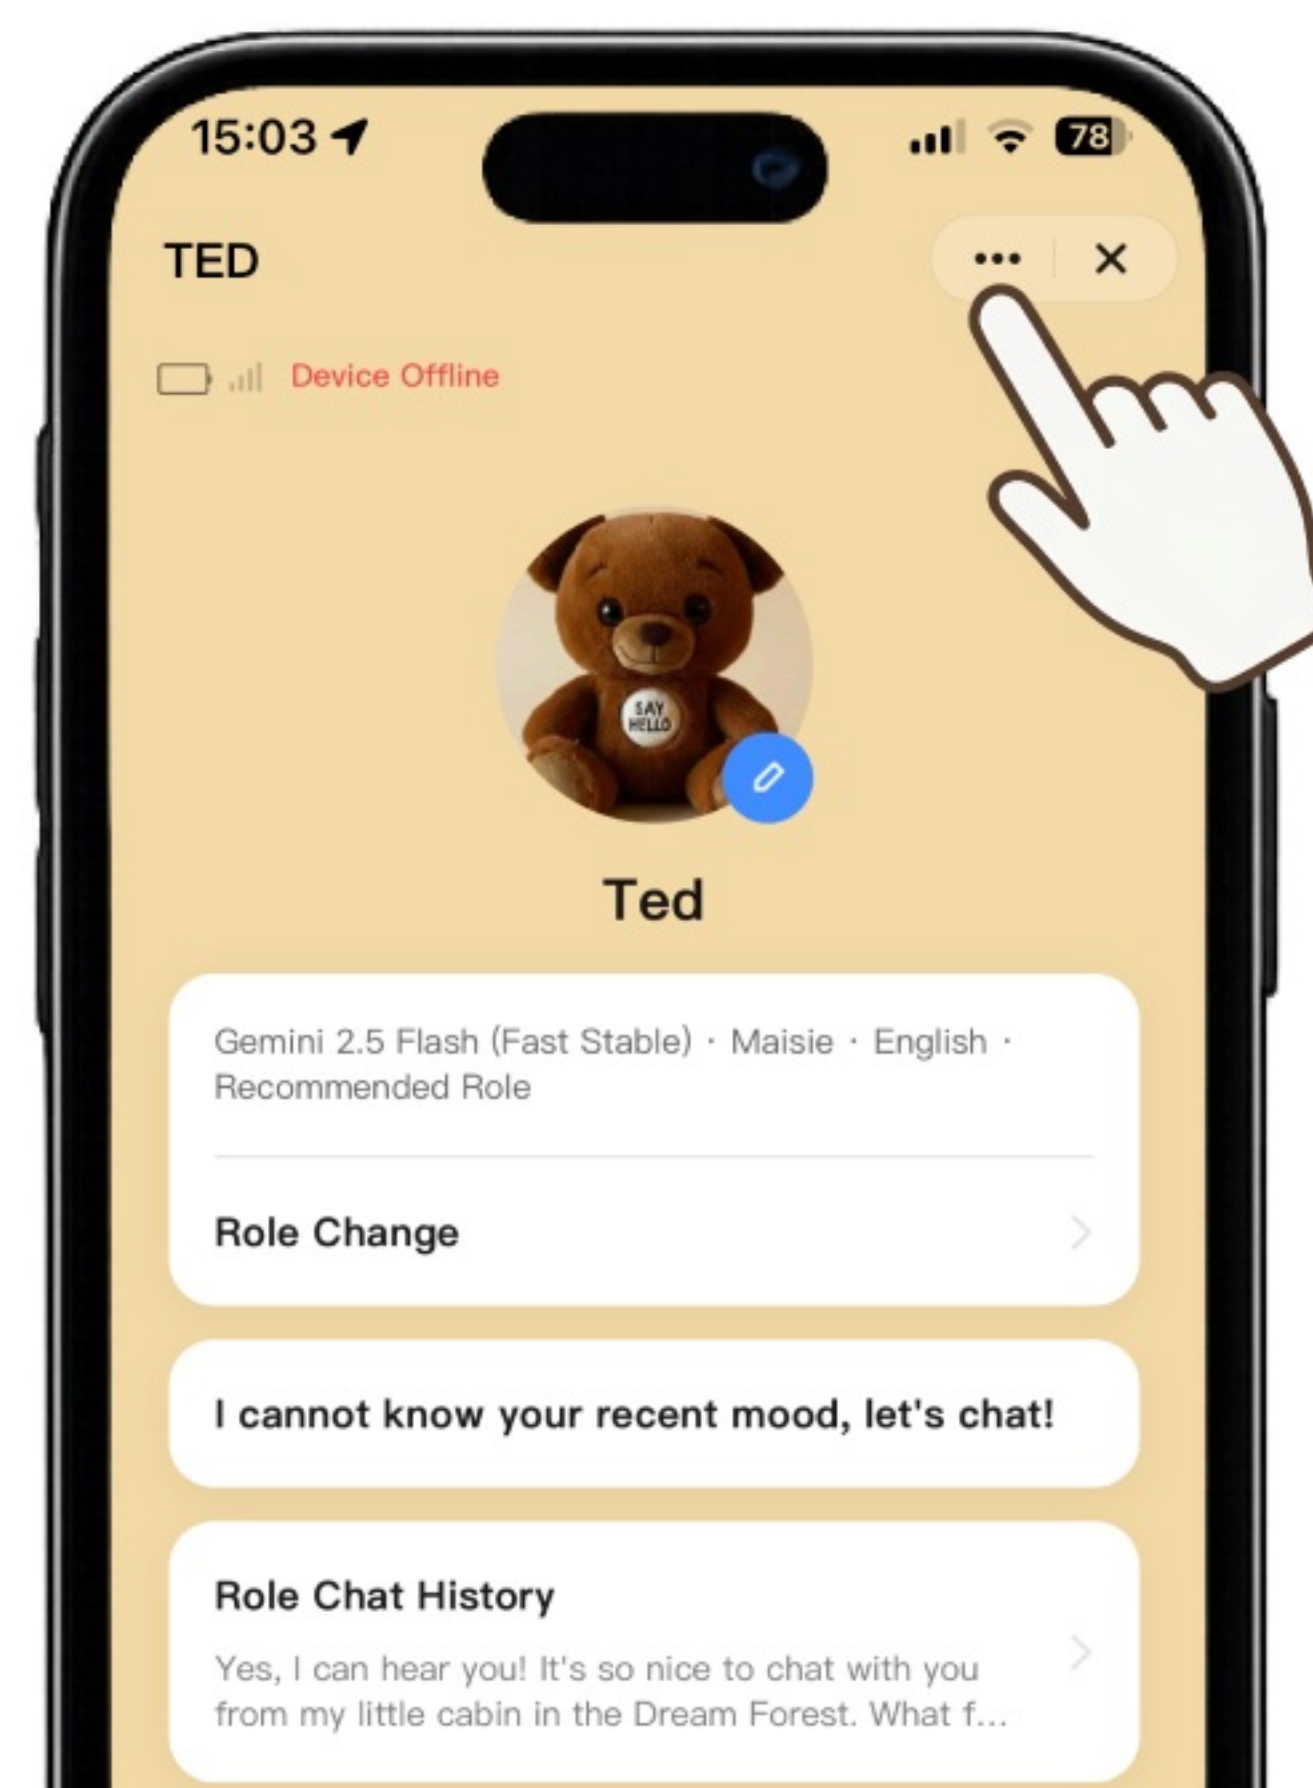


3

Scroll down and tap **"Remove Device."**

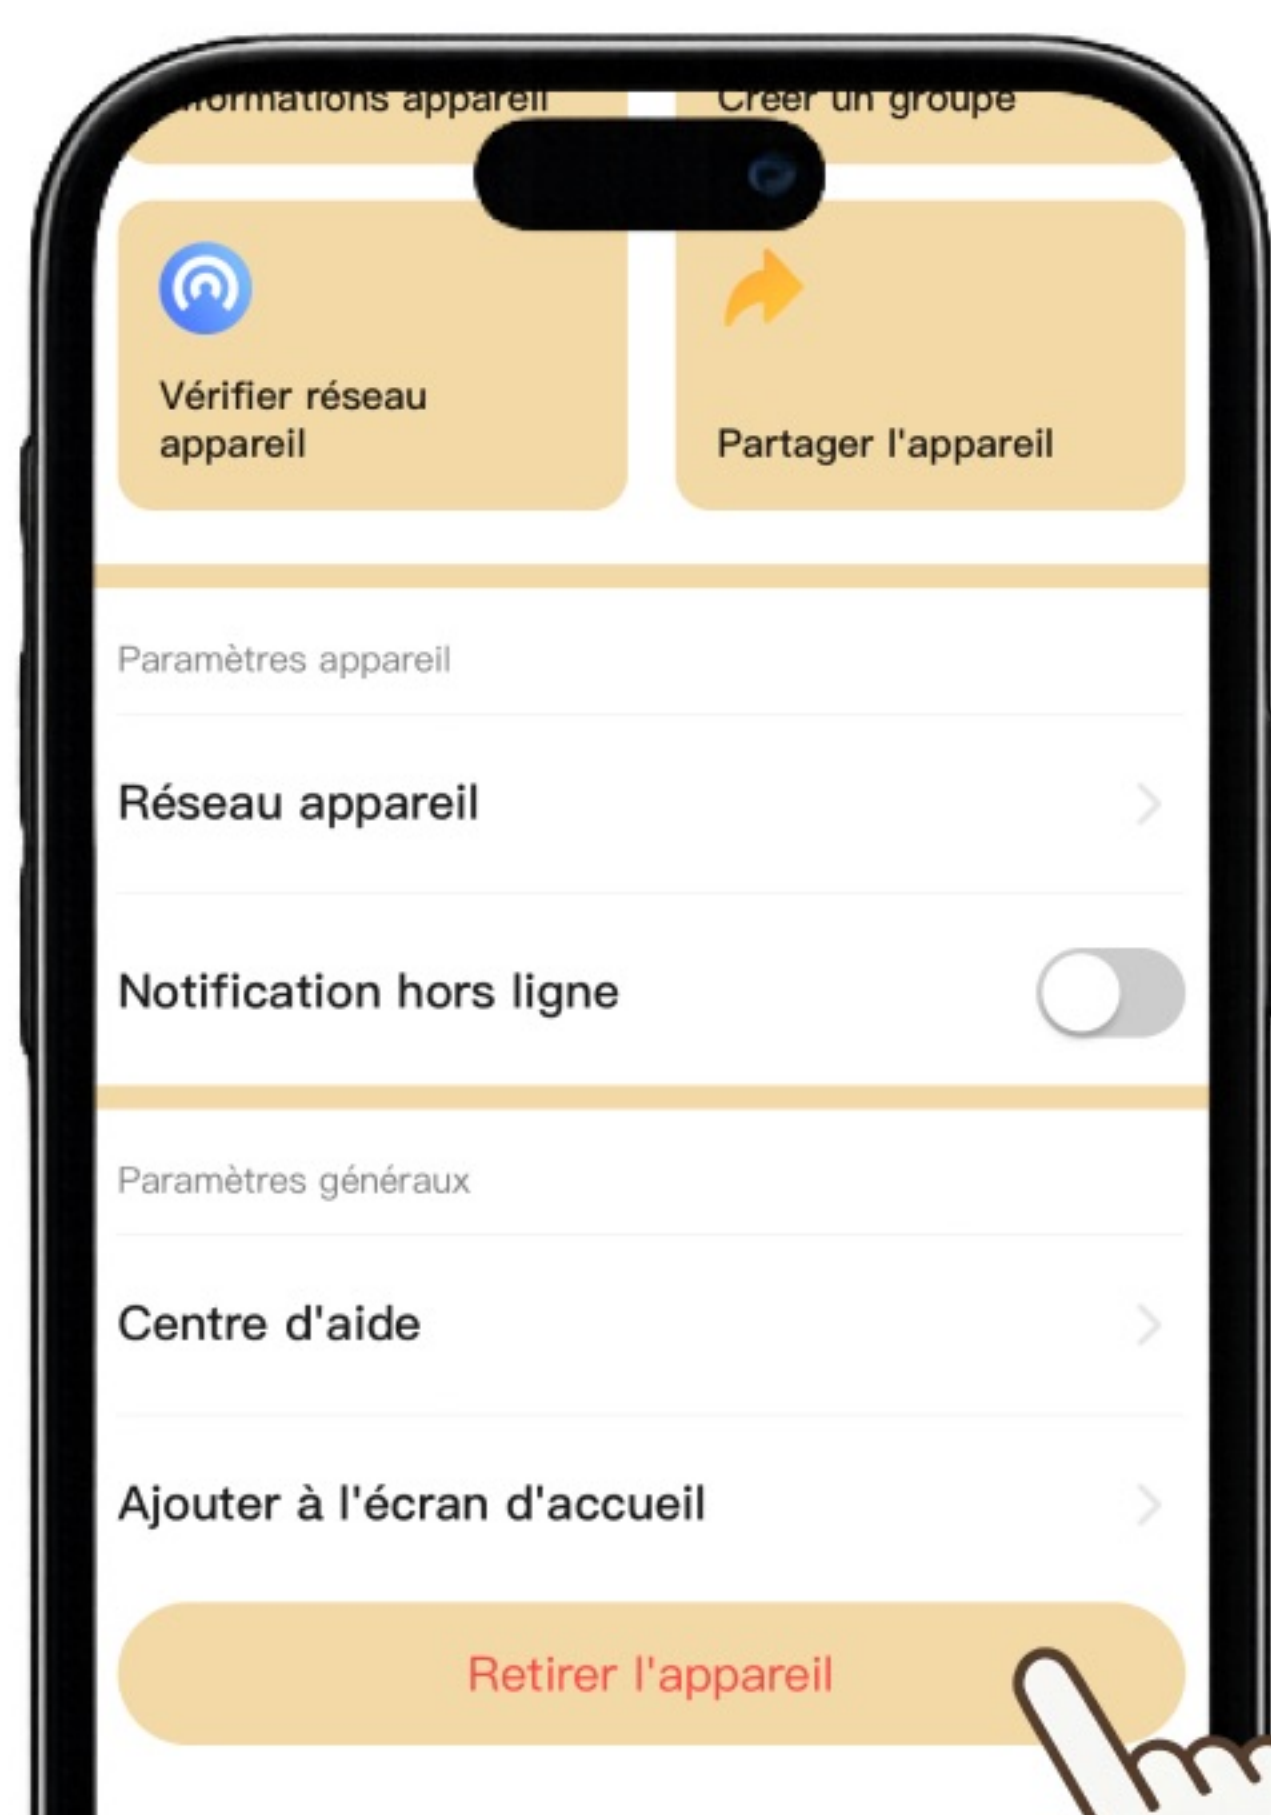

4

Reconnect Ted to add it again.

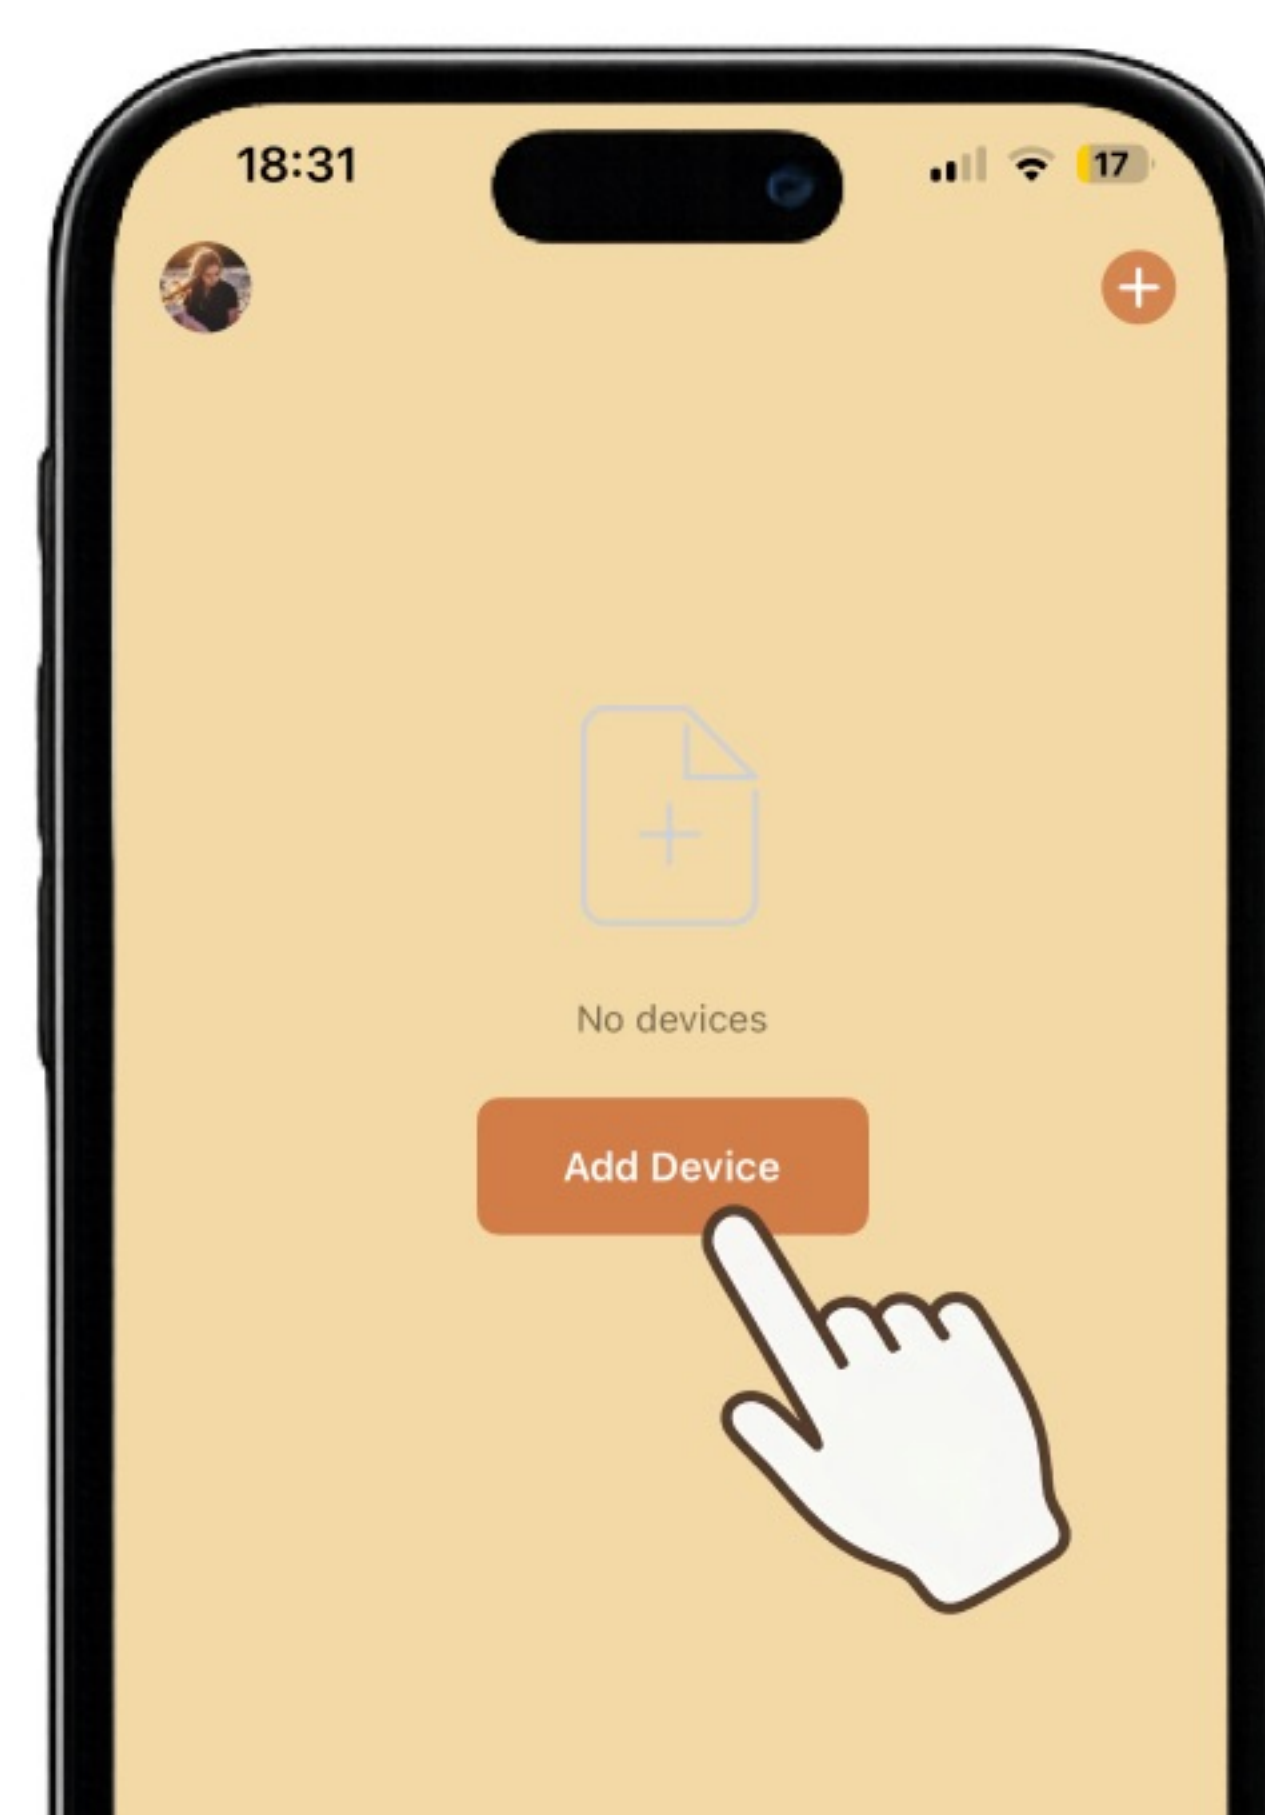

Safety & Tips

- Charge only with a USB-C cable.
- Do not wash the electronic module.
- Use under adult supervision.
- Remove the module before washing the plush.
- Do not use if the module is damaged.
- Ted works best in a calm environment.
- You can change the language at any time.
- Press the belly to interrupt Ted.
- Recharge Ted when it blinks red.



@tedco.toys



hello@tedco.ai

Thank you for being part of the Ted&Co adventure. ❤️